


# COOLSHIRT COOLWRAP

## Rehab Wrap - Ankle/Knee

One Size

1503 - 0001

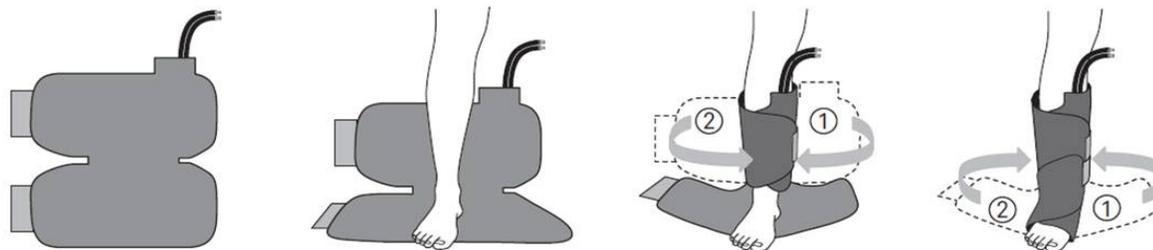

## Instructions for use on Ankle

These wraps are for use only with COOLSHIRT Systems cooling engines. Do not attempt to connect to any other product or system. Read and follow the instructions for the cooling engine provided in the device user manual prior to using this product.

1. Place the foot on the **COOLWRAP** as shown in the diagram with the hoses facing to the rear.
2. Take the rear part of the **COOLWRAP**, wrap it around the lower calf and affix using the **Velcro™** strip.
3. Take the front part of the **COOLWRAP**, wrap it around the midfoot and affix in a proximo-medial direction. Note that contact should be firm but not tight or constrictive.
4. Connect the **COOLWRAP** to the controller hoses by pushing the quick-connectors together until firmly seated.
5. Start the desired treatment using the **Cooling Engine**.
6. Remove the **COOLWRAP** when the treatment is completed.

## CAUTION


1. Use only under the direction of a qualified medical practitioner.
2. Never apply the energy exchanger directly to wounds or broken skin. The **COOLWRAP** is non-sterile and for single patient use. Always use a suitable sterile barrier between the **COOLWRAP** and broken skin.
3. Observe skin condition frequently due to individual differences in the sensitivity and susceptibility to injuries from cold or heat.

# COOLSHIRT COOLWRAP

## Rehab Wrap - Ankle/Knee

One Size

1503 - 0001

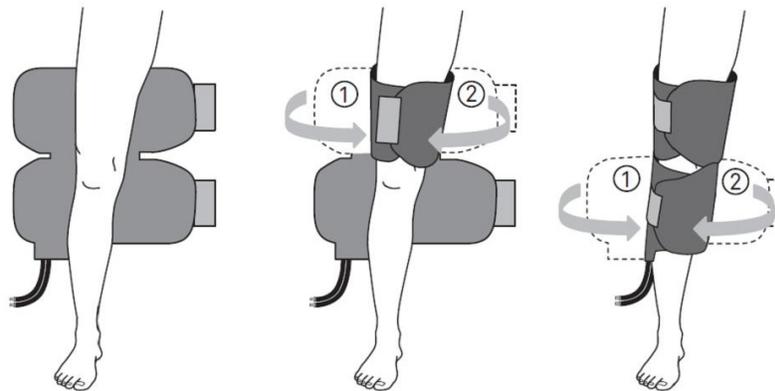

## Instructions for use on Knee

These wraps are for use only with COOLSHIRT Systems cooling engines. Do not attempt to connect to any other product or system. Read and follow the instructions for the cooling engine provided in the device user manual prior to using this product.

1. Place the **COOLWRAP** under the knee with the hoses facing downward.
2. Wrap the **COOLWRAP** around the leg above the knee and affix the **Velcro™** on the outer surface of the **COOLWRAP**.
3. Wrap the **COOLWRAP** around the leg below the knee and affix the **Velcro™** on the outer surface of the **COOLWRAP**. Note that contact should be firm but not tight or constrictive.
4. Connect the **COOLWRAP** to the controller hoses by pushing the quick-connectors together until firmly seated.
5. Start the desired treatment using the **Cooling Engine**.
6. Remove the **COOLWRAP** when the treatment is completed.

## CAUTION

1. Use only under the direction of a qualified medical practitioner.
2. Never apply the energy exchanger directly to wounds or broken skin. The **COOLWRAP** is non-sterile and for single patient use. Always use a suitable sterile barrier between the **COOLWRAP** and broken skin.
3. Observe skin condition frequently due to individual differences in the sensitivity and susceptibility to injuries from cold or heat.